


	INTAKE	EXHAUST
ADVERTISED DURATION	258°	258°
ACTUAL CAM LIFT (in/mm)	.420" / 10.67mm	.420" / 10.67mm
ROCKER ARM RATIO	1:1	1:1
CENTERLINE	104.5°	107°
LOBE SEPERATION	105.75°	
DURATION AT 0.050" CAM	230°	230°
DURATION AT 0.050" VALVE	n/a	n/a
VALVE CLEARANCE	.008" / .20mm SOLID	.012" / .30mm SOLID
RECOMMENDED SPRING KIT	BC0900 - Beehive/Titanium Retainer	

CAMSHAFT TIMING AT 0.050" VALVE LIFT		OPEN	CLOSES
	INTAKE	10° BTDC	40° ABDC
EXHAUST	42° BBDC	8° ATDC	

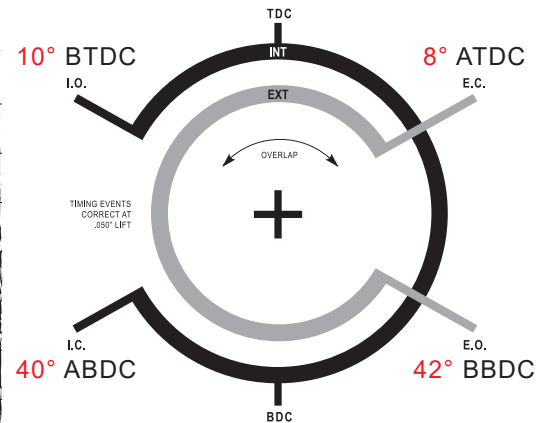

### NOTES

#### STAGE 2 PROFILE

- New, high performance cam cores with stock base circle.
- Works with OE valve spring or BC0900S or BC0900 kit.
- Recommend BC cam followers BC8880 or BC8880-DLC
- Recommend BC lash adjuster shim kit BC3890

BC does not recommend using synthetic oil during break-in or operation. Follow OEM manufacturer's torque sequence and specifications. Use liberal amount of aftermarket engine assembly lube during installation. Check follower or bucket surfaces for abnormal wear and/or scuffing. On initial start-up and break-in run engine at 1500-2500 rpm for 20 minutes. **Camshafts damaged by improper installation, excessive spring pressure or retainers contacting valve guides or seals are void from warranty. Not legal for sale or use on emission controlled motor vehicles.**

